


REPLACEMENT PARTS

Refer to Fig. 6 and Table 8 when ordering replacement parts.

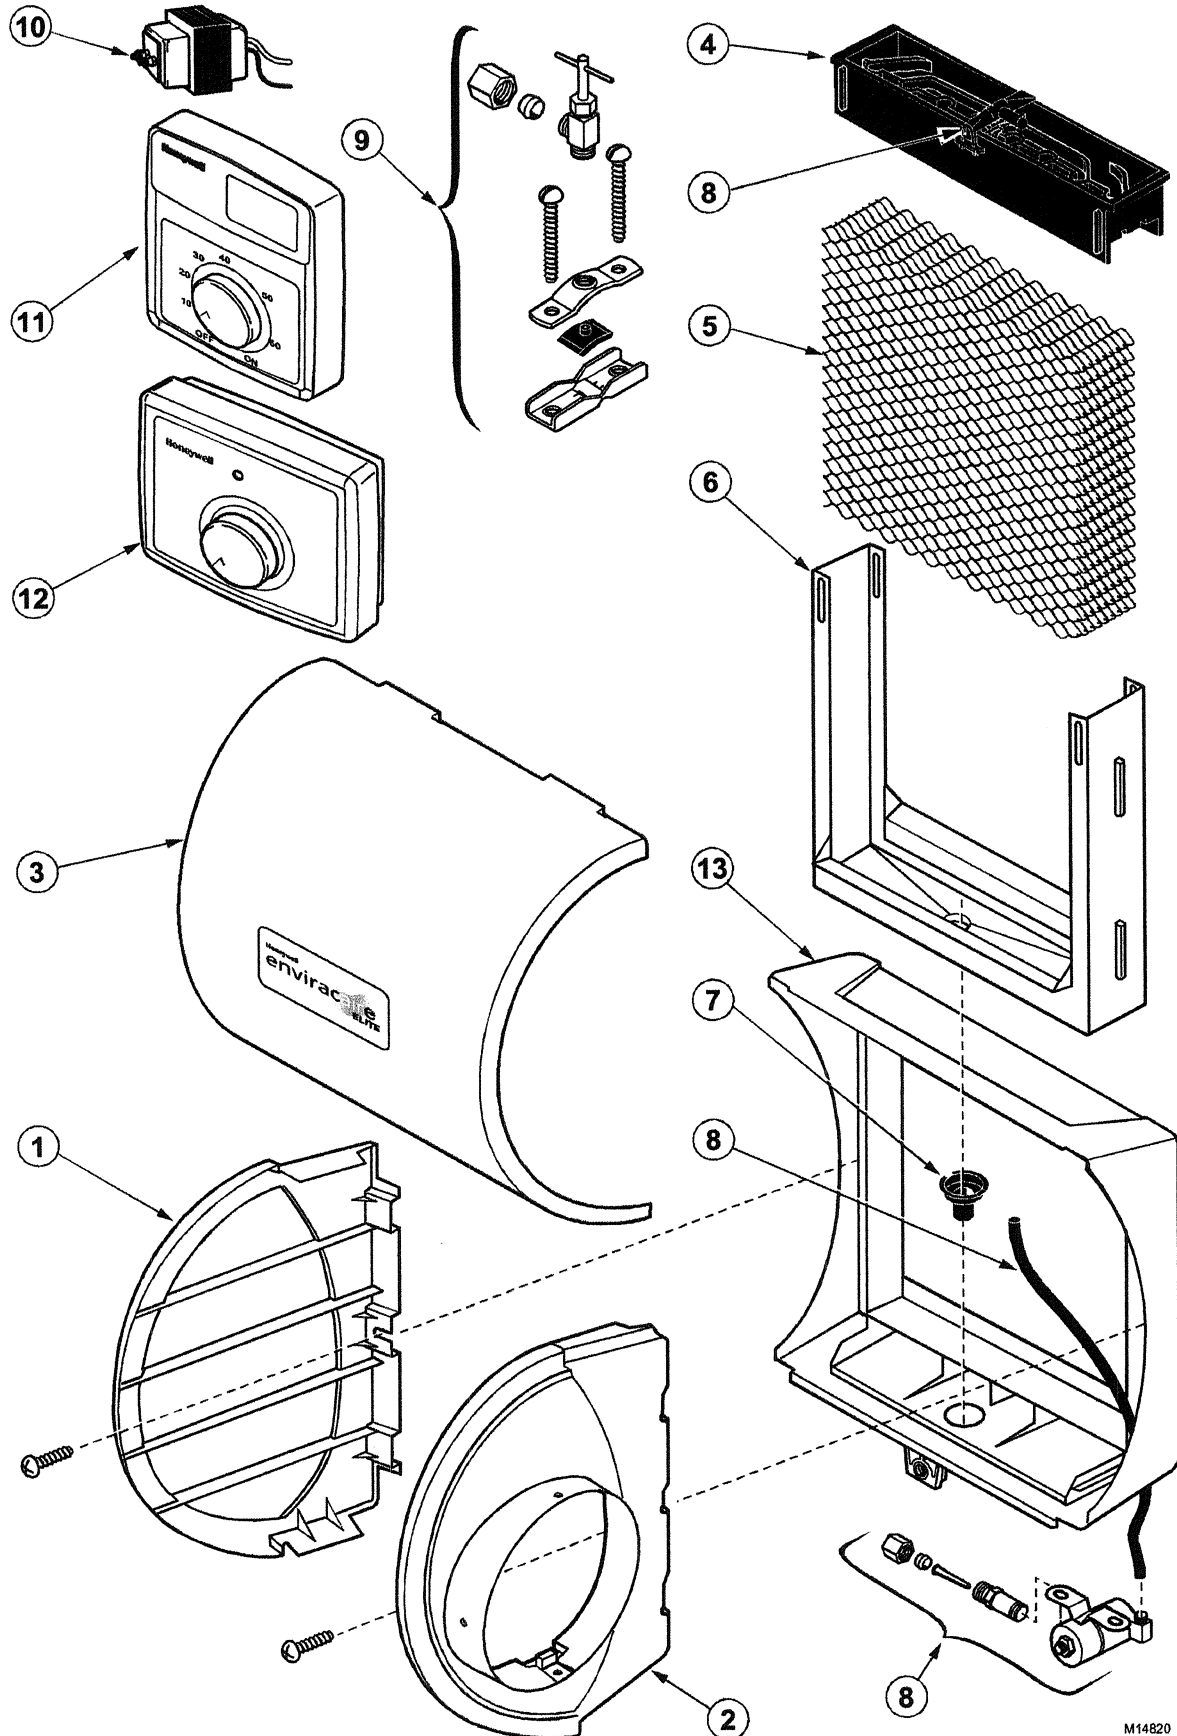

M14820

Fig. 6. Exploded view of humidifier parts.

HE225A,B AND HE265A,B BYPASS FLOW-THROUGH HUMIDIFIER

Table 8. List Of Replacement Parts For HE220A,B, HE260A,B Humidifiers.

Exploded View Number	Description	HE225 Part Number	HE265 Part Number
1	Side wall	32001612-002	32001626-002
2	Bypass side wall	32001613-002	32001627-002
3	Cover Assembly	32001611-003	32001611-004
4	PerfectFlo™ water distribution tray	32001619-001	32001630-001
5	Antimicrobial humidifier pad	HC22E1003	HC26E1004
6	Frame	32001621-001	32001632-001
7	Drain fitting	32001615-001	32001615-001
8	Solenoid valve assembly (includes water feed tube and nozzle)	32001639-002	32001639-002
9	Saddle valve assembly	32001616-001	32001616-001
10	Transformer (10 VA)	32001652-001	32001652-001
11	Convertible Humidity Control	H8908B1002	H8908B1002
12	Automatic Humidity control with HumidiCalc™+ Software	H1008A1008	H1008A1008
13	Base insert assembly, includes no. 8 above	32001625-003	32001625-004
—	Hardware Kit for Solenoid Assembly (same as Solenoid valve assembly without the solenoid valve)	32001752-001	32001752-001
—	Current Sensing Relay	32001754-001	32001754-001