


F52A,B

PARTS DRAWING

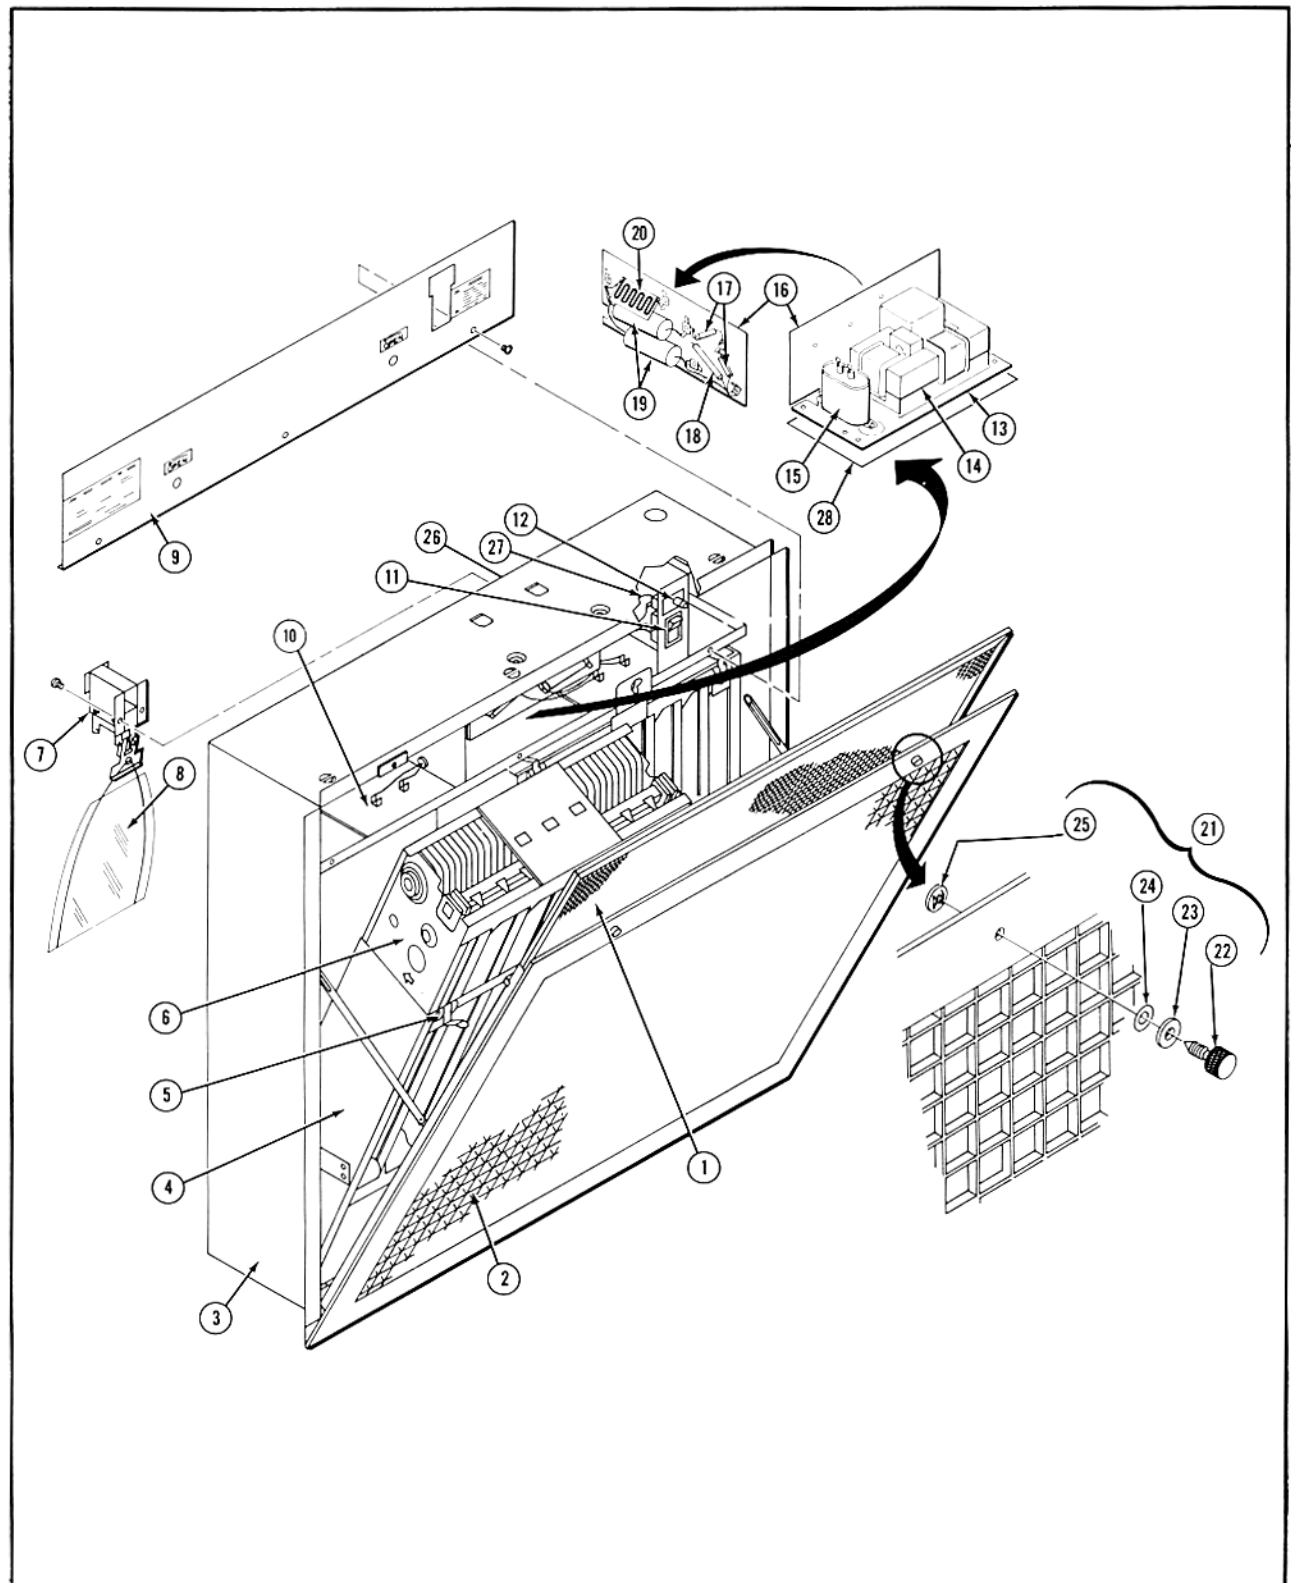

F52A,B

PARTS LIST

NUMBER	DESCRIPTION	ORIGINAL PART NO.		REPLACEMENT PART NO.	
		F52A	F52B	F52A	F52B
1 ^a	Metal Prefilter	138699	138700	—	—
2 ^a	Polystyrene Grille	138627	138628	—	—
3	Door and Frame Assembly (includes 4, 5, 9, 10, 21-25 below)	138637AA	138638AA	—	—
4	Boot Assembly (includes 5 below)	138634A	138634A (right) 138634B (left)	—	—
5	Snap Clip	138609 (2)	138609 (4)	—	—
6	Electronic Cell	FC37A1064	FC37A1064 (2)	FC37A1171	FC37A1171 (2)
7	Sail Switch Assembly (includes 8 below)	126283C	126283C	—	—
8	Sail	123773A	123773A	—	—
9	Power Supply Enclosure and Wiring Compartment Cover	138630	138629	—	—
10	Contact Panel	138621A	138621A (2)	—	—
11	Switch-Indicator Light Assembly	136363	136363	—	—
12	Interlock Switch	121584	121584	—	—
13	Power Supply (includes 14-20 below)	W919A1150	W919A1168	—	—
14	High Voltage Transformer	136572DL	136572AD	136572BE ^d	136572AJ ^d
15	Resonant Capacitor	136749	136749	191503	191503
16	Component Board Assembly (includes 17-20 below)	136596AB	136596AD	—	—
17	Diode (with quick-connect)	137073A (2)	137073A (2)	—	—
18	Resistor — 47.5 M Ω	138180	138180	190125A ^b	190125A ^b
19	Capacitor — .022 μ F	136912 (2)	136912 (2)	—	—
20	Resistor — 22.6 M Ω	—	128675	—	118965A ^c
21	Door Latch Repair Kit (includes 21-25 below—two each)	4074BYW	4074BYW	—	—
22	Thumb Screw	138612 (2)	138612 (2)	—	—
23	Steel Washer	118554 (2)	118554 (2)	—	—
24	Plastic Washer	118555 (2)	118555 (2)	—	—
25	Nut	118556 (2)	118556 (2)	—	—
26	Strain Relief	103074T	103074T	—	—
27	Terminal Bushing	138779	138779	—	—
28	Adapter Plate	138620	138620	—	—
—	Cell Handle	137266	137266 (2)	—	—
—	Ionizing Wires	136434AA	136434AA	—	—

^aReplacement parts for 138651A and 138655A preinstallation grilles.

^bReplacement resistor is 56 M Ω . Changed to 56 M Ω on new devices in mid 1975.

^cReplacement resistor is 1.0 M Ω . Changed to 1.0 M Ω on new devices in mid 1975.

^dChanged to this transformer on new devices in mid 1975.