



FIG. 26—F52 PARTS ARE KEYED TO LIST ON NEXT PAGE.

# PARTS LIST

NUMBER	DESCRIPTION	PART NUMBER (120V AC MODELS ONLY)	
		F52C	F52D
1	Metal Prefilter	190909	190910
2	Door Assembly (includes prefilter and grille)	190909A	190910A
3	Electronic Cell	FC37A1171	FC37A1171 (2)
4	Sail Switch	S688A1007	S688A1007
5	Sail Switch Bracket	190964	190964
6	Power Supply Enclosure (F52D) Power Supply Cover Plate (F52C)	190941A	190934A
7	Cabinet-Cell Contact Boards	190912A	190912A (2)
8	Switch-Indicator Light Assembly	136363	136363
9	Interlock Switch	190333	190333
10	Power Supply (includes 11 to 17 below)	W919A1150	W919A1457
11	High Voltage Transformer	136572BE	136572AJ
12	Resonant Capacitor	136749	136749
13	Component Board Assembly (includes 14 to 17 below)	136596AB	136596AD
14	Diode (with quick-connect)	137073A (2)	137073A (2)
15	Bleed Resistor	190125A	190125A
16	Capacitor	136912 (2)	136912 (2)
17	Collector Resistor	—	118965A
18	Plastic Door Latch	190915 (2)	190915 (2)
19	Acorn Nut for Door Hinge	190948 (3)	190948 (3)
20	Plastic Hook for Cell(s)	190913	190913 (2)
21	Strain Relief	103074T	103074T
22	Terminal Bushing	138779	138779
23	Adapter Plate for Power Supply	138620	—

**Parts Not Illustrated:**

Ionizing Wires (package of 5)—Part No. 136434AA.

Customer pack of 25 wires also available.

Cell Handle—F52C, Part No. 137266; F52D, Part No. 137266 (2).